




BEFORE YOU START:
Swidget Wiring Devices: Ensure Swidget Outlets (R1015SWA) and/or Switches (S16001WA) are installed in key areas of the home (sold separately).
Good Cell Signal: Confirm availability of cellular reception at the property for the kit's LTE Hotspot.

QUICK START GUIDE & Security Cards

VACANTVIEW™ by SWIDGET

VACANTVIEW™
by SWIDGET

*Store the quick-start
guide safely in the lid.*

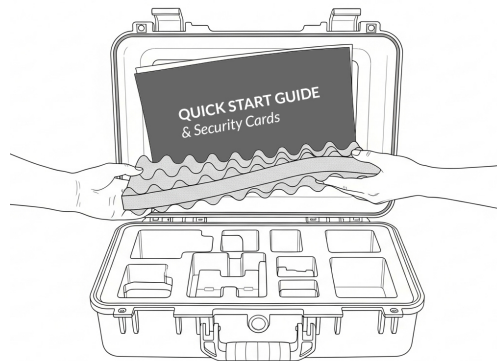

swidget.com | Sales: 1-833-303-3433 | sales@swidget.com

© Swidget Corp. 2025

1. Install Inserts and Hotspot

- ## 2. Create Account

- 

-

[← Scan QR Code](#)

Add Kit

Change the name or Property associated with this Kit

Kit Name

SWID-00018

Property

No Property Selected

- [< Back](#)Create Property

Enter Property Name



Choose Background

Save

